

# UltraPro™ A-1801

# **Acid Stable Membrane Data Sheet**

# **Product description**

Membrane Chemistry: Proprietary Composite Ultrafiltration Membrane

Membrane Type: Acid Stable Ultrafiltration Membrane

2540/4040 Spiral Wound Element

**Construction\*:** Feed Spacer: 31 mil, 46 mil

Permeate Tube: Polysulfone

# **Specifications**

Model	Permeability (LMH/bar)	Membrane Area m <sup>2</sup> (ft <sup>2</sup> )	Feed Spacer mil
A-1801-2540-31P	18	1.9 (20)	31
A-1801-2540-46P		1.5 (16)	46
A-1801-4040-31P		6.5 (70)	31
A-1801-4040-46P		5.2 (56)	46

Test Conditions:  $2 \text{ bar } (30 \text{ psi}), 30^{\circ}\text{C } (86^{\circ}\text{F})$ . Flux measured with RO water. Permeate flux may vary for individual element but it will no more than 20% below the above value

www.amsmembrane.com

<sup>\*</sup>For special requests, please contact AMS



### **Operating Information(\*)**

Maximum Operating Pressure:10 bar (145 psi)Maximum Operating Temperature:50°C (122°F)Maximum Cleaning Temperature:50°C (122°F)

Allowable pH – Continuous Operation: 0-12 Allowable pH – Clean in Place (CIP): 0-13

Maximum Pressure Drop per Element: 0.5 bar (7.2 psi)

2540: Minimum 7.5 L/min (2 gpm), Maximum 19 L/min (5 gpm) Recirculation Flow Rate

4040: Minimum 22 L/min (6 gpm), Maximum 65 L/min (17 gpm)


(\*) Consult AMS Technologies for specific information

### **Recommended cleaning materials**

- Depending on the nature of the feed material, a choice can be made from the following cleaning agents:
  - Sodium hydroxide at pH 10-12, 40°C (104°F)
  - Nitric or hydrochloric acid at pH 1-2, 40°C (104°F)
  - 0.2-1% w/w Na-EDTA, pH 10.5-11, 35°C (91°F)
  - 0.5% anionic surfactant (such as SDS), pH 10.5-11, 35°C (91°F)
- Water quality for cleaning:
  - Maximum turbidity is 1 NTU

### **Nominal Product Dimensions**

For 2540/4040:

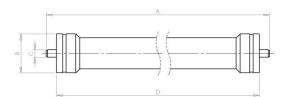

Size	A	В	С	D
	mm (inches)	mm (inches)	mm (inches)	mm (inches)
2540	1016 (40)	61 (2.4)	19 (0.75)	954 (37.5)
4040	1016 (40)	99 (3.9)	19 (0.75)	965 (38)



#### **Lubricants:**

For element installation, use only water or glycerin to lubricate seals. The use of petroleum or vegetable-based oils or solvents may damage the element and void any warranty.

#### **Preservation**

- Short Term (up to four weeks): 1% w/w sodium metabisulfite.
- Long Term: Please refer to the AMS element storage and handling instructions.

#### **Storage**

• The membrane should not be allowed to dry. It should be stored in a sealed bag, at 4°-30°C (39-86°F).

## **Acid Stability:**

Typical solutions include:

20% H<sub>2</sub>SO<sub>4</sub> 20% HCl 4% HNO<sub>3</sub>

30% H<sub>3</sub>PO<sub>4</sub> 15% Acetic acid

Our membranes run at high and stable fluxes in very acidic environment for 12 months and more.

#### **Other**

- Do not expose the membrane to chlorine or other oxidants.
- Sodium metabisulfite (without catalysts such as cobalt) is the preferred chemical to eliminate free chlorine or other oxidizers in the feed.